# **TECH SUPPORT** MONDAY - FRIDAY 9AM-5PM EST (904) 342-4008



SDC

SMART MODULE

# YN LICENSE PLATE FRAME **& AYN SMART MODULE**

### ATION

ires	2. This Frame was designed to match the bolt hole pattern of		
ided	most states license plates. It		
е	may be necessary to		
f the	adjust the holes of the license		
res	plate to accommodate the frame.		
е	This can be done easily with the		
he	use of a round file. If adjustment is necessary, it is minimal.		

3. Determine where and how to run the wires from the L.E.D. light array to the motorcycle's wiring. (see diagrams and wiring instructions below. Additional lengths of connecting wire may be required (not provided).

4. Included are 4 rear mount stud screws, washers and locking huts. Insert the stud screws into the holes on your AYN frame and use a 3/16 alan wrench to torgue them down tight to prevent loosening from vibration. Then add the washer and nut to secure the frame and license plate in place.

5 AMP FUSE (NOT INCLUDED)

SHOW MODE IAZARD

÷

SWITCHED POWER SOURCE


NNING LIGHT)

5. We reccomend that you first test our ÁYN license plate frame on a known 12V power source prior to installation to ensure proper function

#### IF YOU INSTALL THE FRAME ALONE, FOLLOW INSTALL OPTION 1. ATION IF YOU HAVE THE FRAME AND SMART MODULE CHOOSE INSTALL OPTION 2.

## )N 1

ing diagram for Plate Frame HOUT the AYN separately).

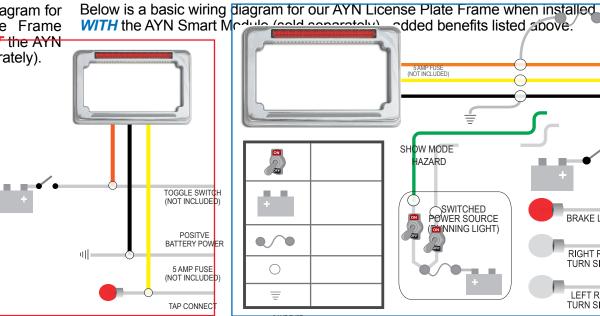

**INSTALL OPTION 2** 

GROUND

Wecher command splaning using using with your bikes tool kit or owner's manual to use as a future reference for changing your bikes brake modes, or to engage Hazard Flashers or Night Rider mode.

#### Mode Table:

mounted in a logation not subject to extreme heat conditions or pear high voltage areas such as your ignition

	Mode A	(Default) Rapid Wig-Wag, then patented BackOFF flash sequence*	6 brake flashes	
	Mode B	Rapid Wig-Wag then steady on	9 brake flashes	
	Mode C	Steady On	12 brake flashes	
	Mode D	Continuous Rapid Wig-Wag	15 brake flashes	
			-	

BRAKE LIGHT

**RIGHT REAR** TURN SIGNAL

I FFT REAR TURN SIGNAL

Toeengage/Emergency/Hazard Flashers without the use of an optional switch: Turn Right turn signal on, apply brakes and turn the bikes key Ľ switch off. When the hazard flasher is turned on this way it will continue to flash until the bikes key switch is turned back on.

The Night Rider mode is meant to draw attention to your bike at bike shows, rally's, or bike nights. To engage Night Rider Mode without the use of an optional switch: Turn Left turn signal on, apply brakes and turn the bikes key switch off. When the Night Rider mode is turned on this way it will continue to flash until the bikes key switch is turned back on. I.

# FORE INSTALL

Smart module in ame you will need to ble modes and how to he event you install the le, a reference sheet of oose from and how to these instructions out o you can easily place ox or saddlebag for

WIRES FROM THE L YOUR HAZARD DER' MODE WITH A ATHER THAN USING OPTIONAL.

d that the module he

To change brake flash modes: Within 10 seconds after turning the bike on, press and release the brakes the number of times in the table below to change brake modes. (Wait until the end of the 10 seconds before pressing the brakes again to avoid switching to an unwanted mode). Brakes will remain in this mode until they are changed again by the user.