




LED BULLET LIGHTS BOLT MOUNT INSTALLATION INSTRUCTIONS

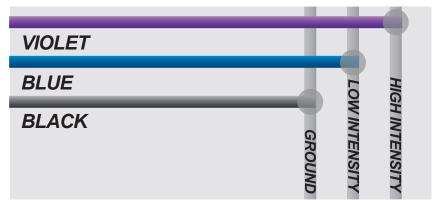

TO INSTALL


YOU MAY NEED A TEST LIGHT TO LOCATE THE PROPER WIRES. WE RECOMMEND USING TAP SPLICE CONNECTORS TO CONNECT THE WIRING (NOT INCLUDED).

STEP 1: TAP THE VIOLET WIRE FROM THE BULLET LIGHT TO A HIGH INTENSITY WIRE.

STEP 2: TAP THE BLUE WIRE FROM THE BULLET LIGHT TO A LOW INTENSITY WIRE.

STEP 3: TAP THE BLACK WIRE FROM THE BULLET LIGHT TO A GROUND WIRE.

STEP 4: MANUFACTURED TO BE MOUNTED ON MOTORCYCLE FORKS WITH FORK CLAMPS. (NOT INCLUDED)

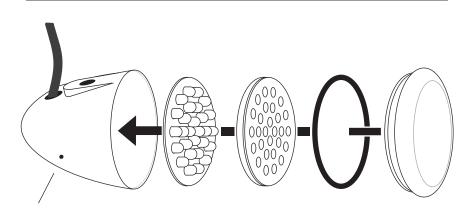

Weephole for Drainage: This should be located at the bottom of the light when mounting. Each package contains a left and right bullet light, be sure your weephole is facing downward for proper drainage.

TECH SUPPORT | MON-FRI 9AM-5PM EST (904) 342-4008 OR INFO@SIGNALDYNAMICS.COM