SDC SIGNAL DYNAMICS CORPORATION

BackOFF PRODUCTS

LED BULLET LIGHTS
BOLT MOUNT

INSTALLATION INSTRUCTIONS

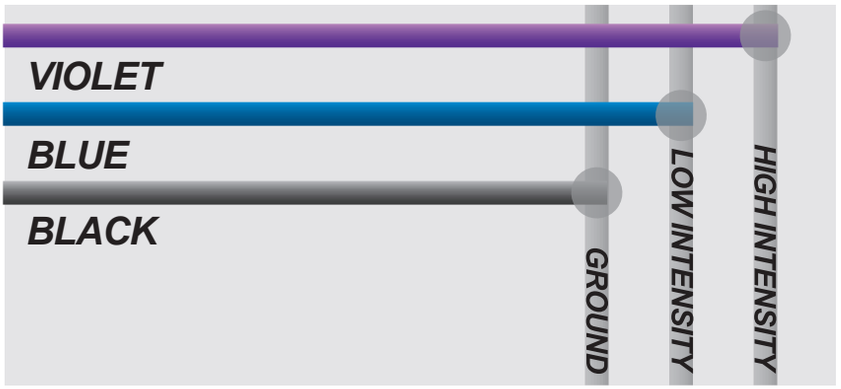

TO INSTALL

YOU MAY NEED A TEST LIGHT TO LOCATE THE PROPER WIRES. WE RECOMMEND USING TAP SPLICE CONNECTORS TO CONNECT THE WIRING (NOT INCLUDED).

STEP 1: *TAP THE VIOLET WIRE FROM THE BULLET LIGHT TO A HIGH INTENSITY WIRE.*
STEP 2: *TAP THE BLUE WIRE FROM THE BULLET LIGHT TO A LOW INTENSITY WIRE.*
STEP 3: *TAP THE BLACK WIRE FROM THE BULLET LIGHT TO A GROUND WIRE.*
STEP 4: *MANUFACTURED TO BE MOUNTED ON MOTORCYCLE FORKS WITH FORK CLAMPS. (NOT INCLUDED)*

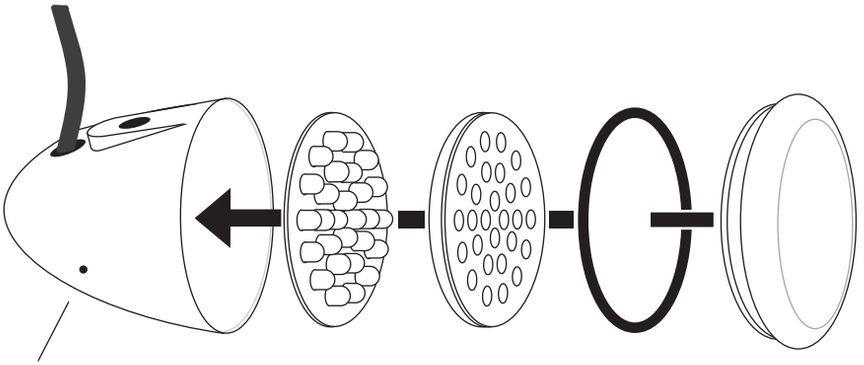

Weephole for Drainage: This should be located at the bottom of the light when mounting. Each package contains a left and right bullet light, be sure your weephole is facing downward for proper drainage.

TECH SUPPORT | MON-FRI 9AM-5PM EST

1-800-785-1814 OR INFO@SIGNALDYNAMICS.COM